



NAPCO 1008E INSTRUCTIONS

TO ARM:

1. WAIT FOR STEADY GREEN LIGHT
2. ENTER CODE (LIGHT WILL TURN RED)

LOST POWER:

1. THREE LIGHTS AND -1- ARE FLASHING
2. HOLD DOWN -9- TO OPERATE WITHOUT POWER

ZONE TROUBLE:

1. GREEN LIGHT FLASHING
2. HOLD DOWN -3- TO DISPLAY ZONE FAULTED

RESET:

1. HOLD DOWN -9- UNTIL BEEPS

ADD CODE:

1. HOLD DOWN -8- UNTIL IT BEEPS
2. ENTER 5-6-1-2-3-4 (LIGHTS WILL START FLASHING)
3. PRESS -S- OR -BA-
4. ENTER USER NUMBER
5. ENTER NEW USER CODE
6. PRESS -S- OR -BA- TWICE (LIGHTS WILL STOP FLASHING)

DELETE A CODE:

1. HOLD DOWN -8- UNTIL IT BEEPS
2. ENTER 5-6-1-2-3-4 (LIGHTS WILL START FLASHING)
3. PRESS -S- OR -BA-
4. ENTER USER NUMBER

CHANGE A CODE:

1. HOLD DOWN -8- UNTIL IT BEEPS
2. ENTER 5-6-1-2-3-4 (LIGHTS WILL START FLASHING)
3. PRESS -3- OR -BA-
4. ENTER USER NUMBER
5. ENTER NEW USER CODE
6. PRESS -S- OR -BA- TWICE (LIGHTS WILL STOP FLASHING)

CHIME MODE:

1. HOLD DOWN -5- UNTIL IT BEEPS

BYPASS ZONE:

1. PRESS -BA- (BYPASS BUTTON)
2. ENTER ZONE NUMBER
3. ENTER CODE