

The 6290W Touchscreen allows you to perform system arming and disarming functions, as well as to monitor the status of your security system.

Your Home/Security screen is the gateway to your System.

From this screen, you can:

- control your security system
- control your multi-media applications such as video and pictures


Your Home screen is displayed most of the time and can be customized via the Multimedia application.

POWER / RESET BUTTON

GREEN
• Ready To ARM

RED
• System Armed
• System Alarm

BLANK (No LED lit)
• Not Ready to Arm
• Alarm Silenced (Alarm Memory)

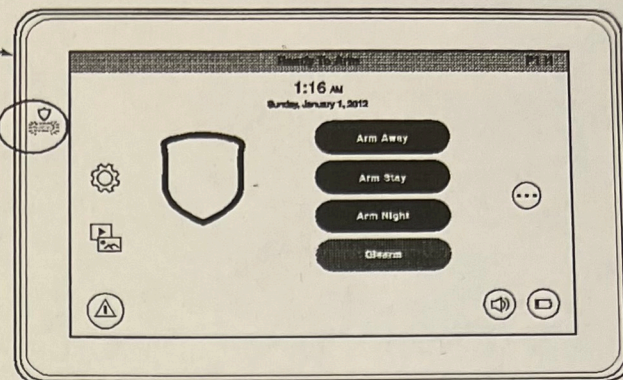

ARMING THE SYSTEM

From the Home/Security Screen:

Select the Security icon

You can arm the system in one of three arming modes: Away, Stay, and Night. Select the **Security** icon.

ARM AWAY

AWAY – Select to arm when no one is staying on the premises.

ARM STAY

STAY - Select to arm when you are staying home, but might expect someone to use the entrance door later.

ARM NIGHT

NIGHT - Select to arm when you are staying home and do not expect anyone to use the entrance door.

IMPORTANT: If you return to your home or business and the main burglary sounder is on, DO NOT enter the premises, but call the police from a nearby safe location. If you return to your home or business after an alarm has occurred and the main sounder has shut itself off, the Touchscreen beeps rapidly upon entering, indicating that an alarm has occurred during your absence. **LEAVE IMMEDIATELY and CONTACT THE POLICE** from a nearby safe location.

DISARMING THE SYSTEM AND SILENCING ALARMS

To silence Alarms or Trouble conditions: enter your 4-digit user code, select the **Clear** button, then enter your 4-digit user code again.

To disarm the system when already in the premises: select the Disarm icon

DISARM

and enter your 4-digit user code.

To disarm the system when entering the premises: enter your 4-digit user code.

EMERGENCY MESSAGES

An emergency message for fire, police, or medical can be sent to the central monitoring station from the **Emergency** screen. Select the **PANIC** icon (located in the lower left corner of the screen). Select and hold (for at least 2 seconds) the associated alarm icon.



PANIC



SILENT PANIC



FIRE



POLICE



MEDICAL

The Security screen also displays an Icon(s) if a system trouble(s) occurs. If a Trouble Icon is shown, contact your alarm company.



Touchscreen Reset: To reset the Touchscreen, press and hold the side Power Button for 3 seconds and then select the reset button on the screen to start the reset function. The Touchscreen can also be reset by pressing and holding the reset button for approximately 15 seconds until the touchscreen resets automatically.

Select the **Disp & Audio Setup** icon

1. Enter an Authorized Code.

Select the desired **Operating Mode: Chime Mode / Voice Mode / Voice Chime.**

- Select "Backlight off After" to select the time increment for the backlight to be lit.
- Select "To Homepage After" to select the time increment for the homepage to be displayed.
- Select "Auto Slideshow After" to select the time increment for viewing photos.
- Select **Apply** when done or select the **Back** arrow to return to previous screen.

To test the Alarm, select the **Security** and **More Choices** icons.

-Select **Console Mode** and refer to the Control Panel User Guide for procedure.

-Select **Event Logs** to view events and partitions.

-Select **Show Zones** to set zones and select bypass zones.

ICON DESCRIPTIONS

ICON	ICON TITLE/FUNCTION
	Home/Security - Returns you to the Home/Security screen.
	"Security" - Arm the system and access the three arming modes.
	"Setup" - Accesses System Info, System Setup, System WIFI, Disp & Audio Setup and Brightness / Volume.
	"Multimedia" - Accesses Videos and Images.
	"Wi-Fi" - Accesses Wi-Fi setup options.
	"Disp & Audio Setup" - Accesses Operating Modes, Backlight, Homepage and Slideshow options.
	"Authorized Code" - Enter 4-digit authorized code.
	Adjust screen Brightness and Volume.
	"More Choices" - Accesses Event Logs, Console Mode and Show Zones screens.
	"PANIC" - Accesses Fire, Police and Medical emergency.
	Control Panel Message - Alerts user to a control panel message.